



IBM Storwize® V3700 Installation Poster

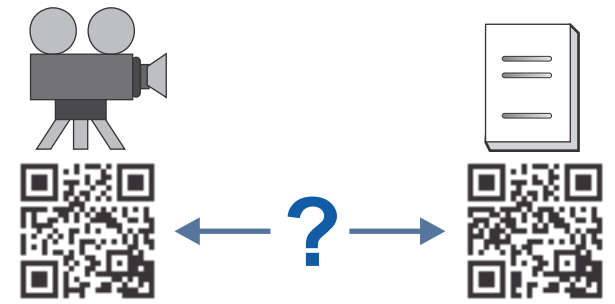


Before installing your Storwize V3700 components, read the *Systems Safety Notices* in the publications package.


Tool required

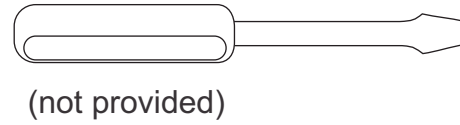







Control (C) enclosure package Control enclosure options

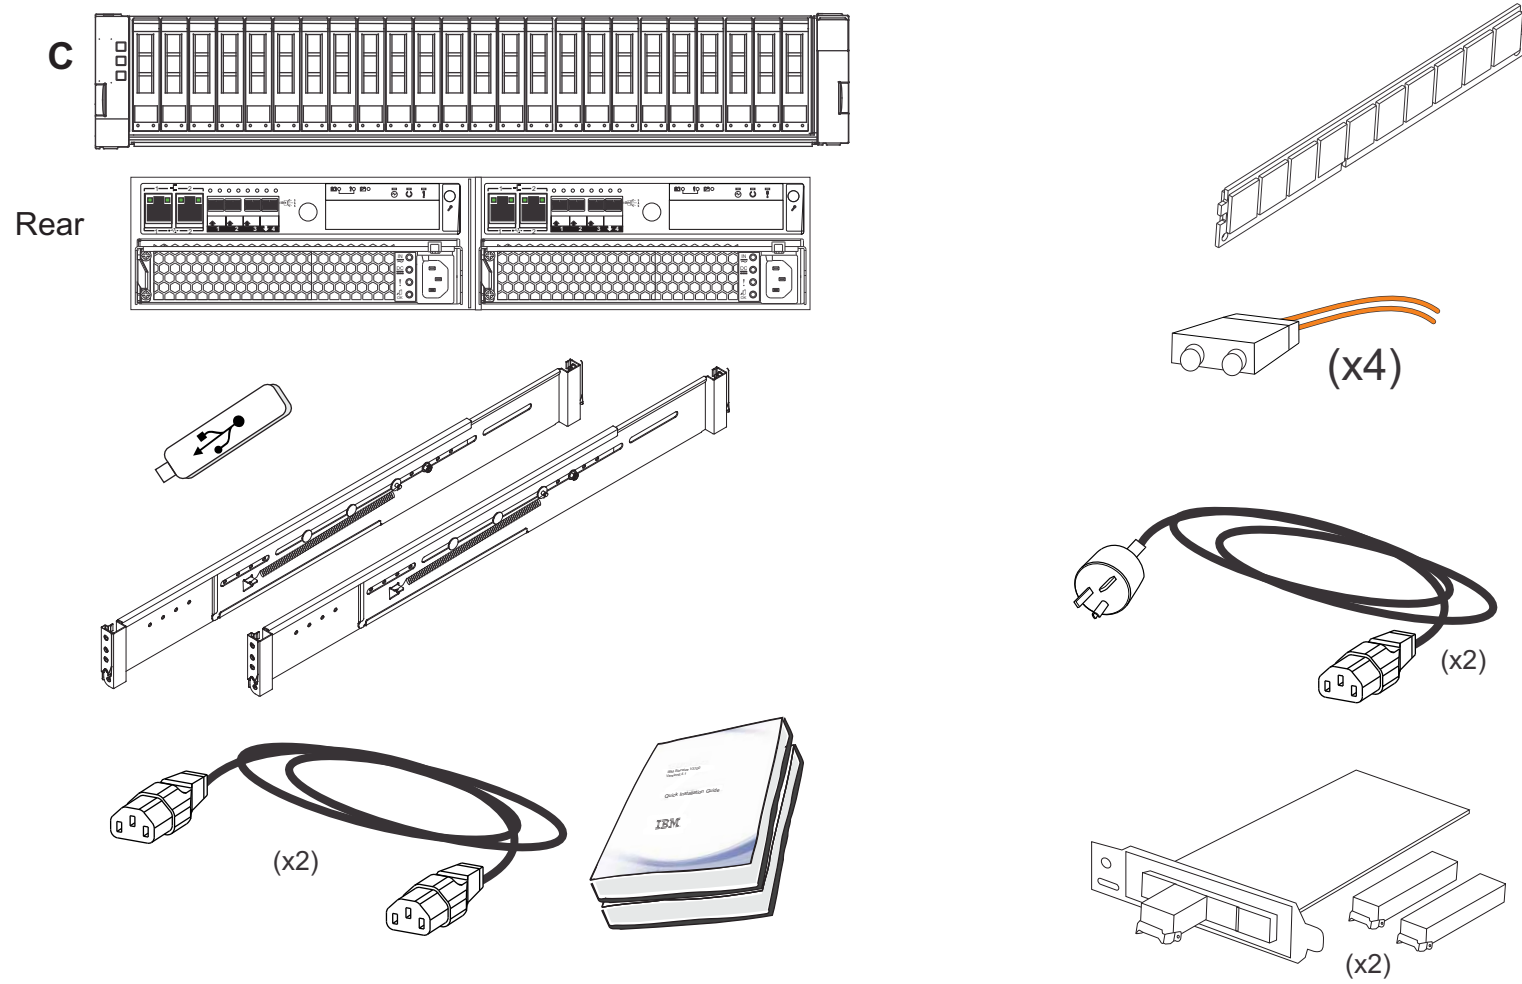


Expansion (E) enclosure package Drives

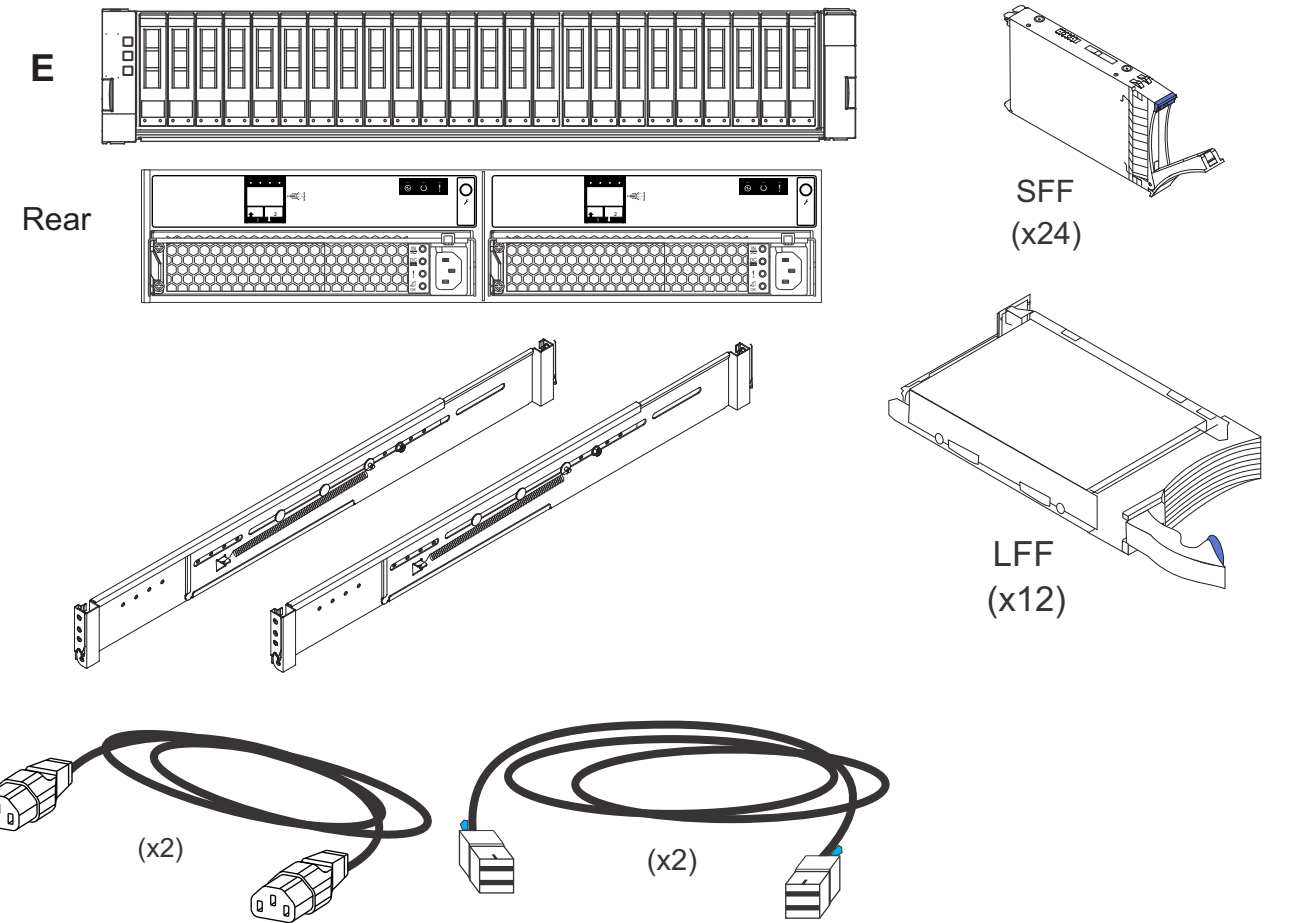




1 Install all enclosures in the rack

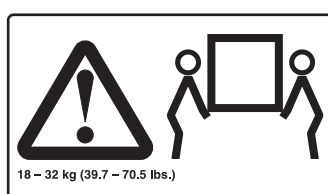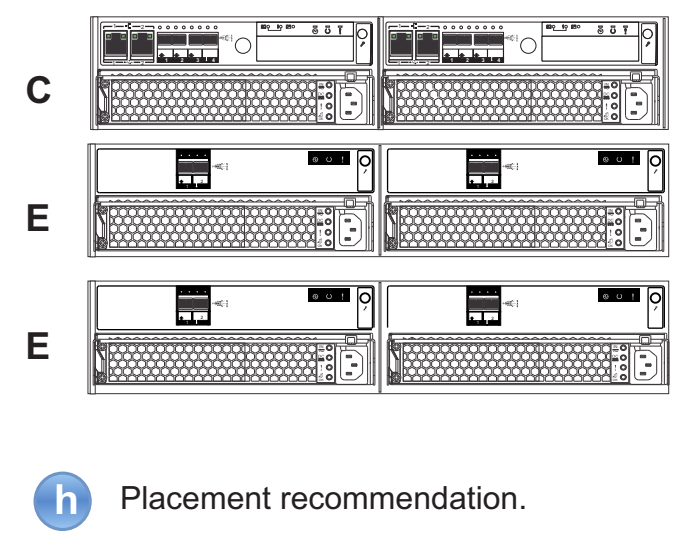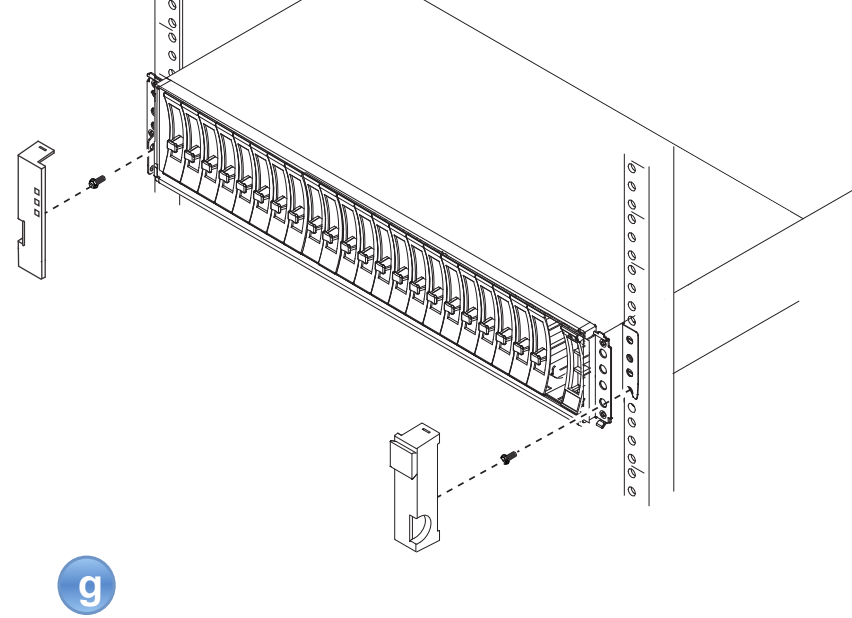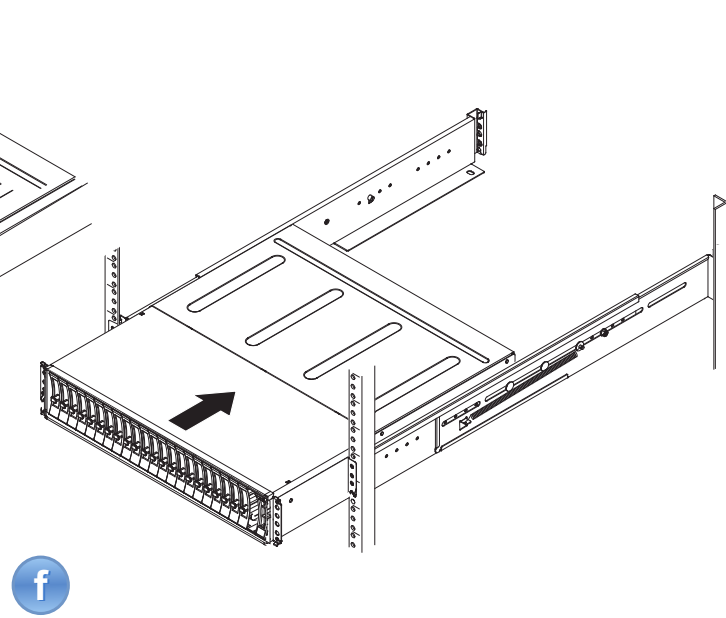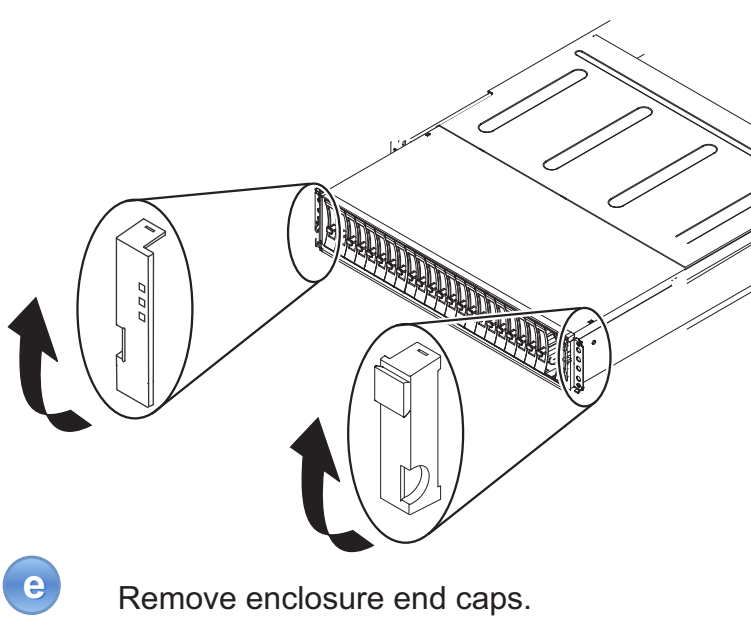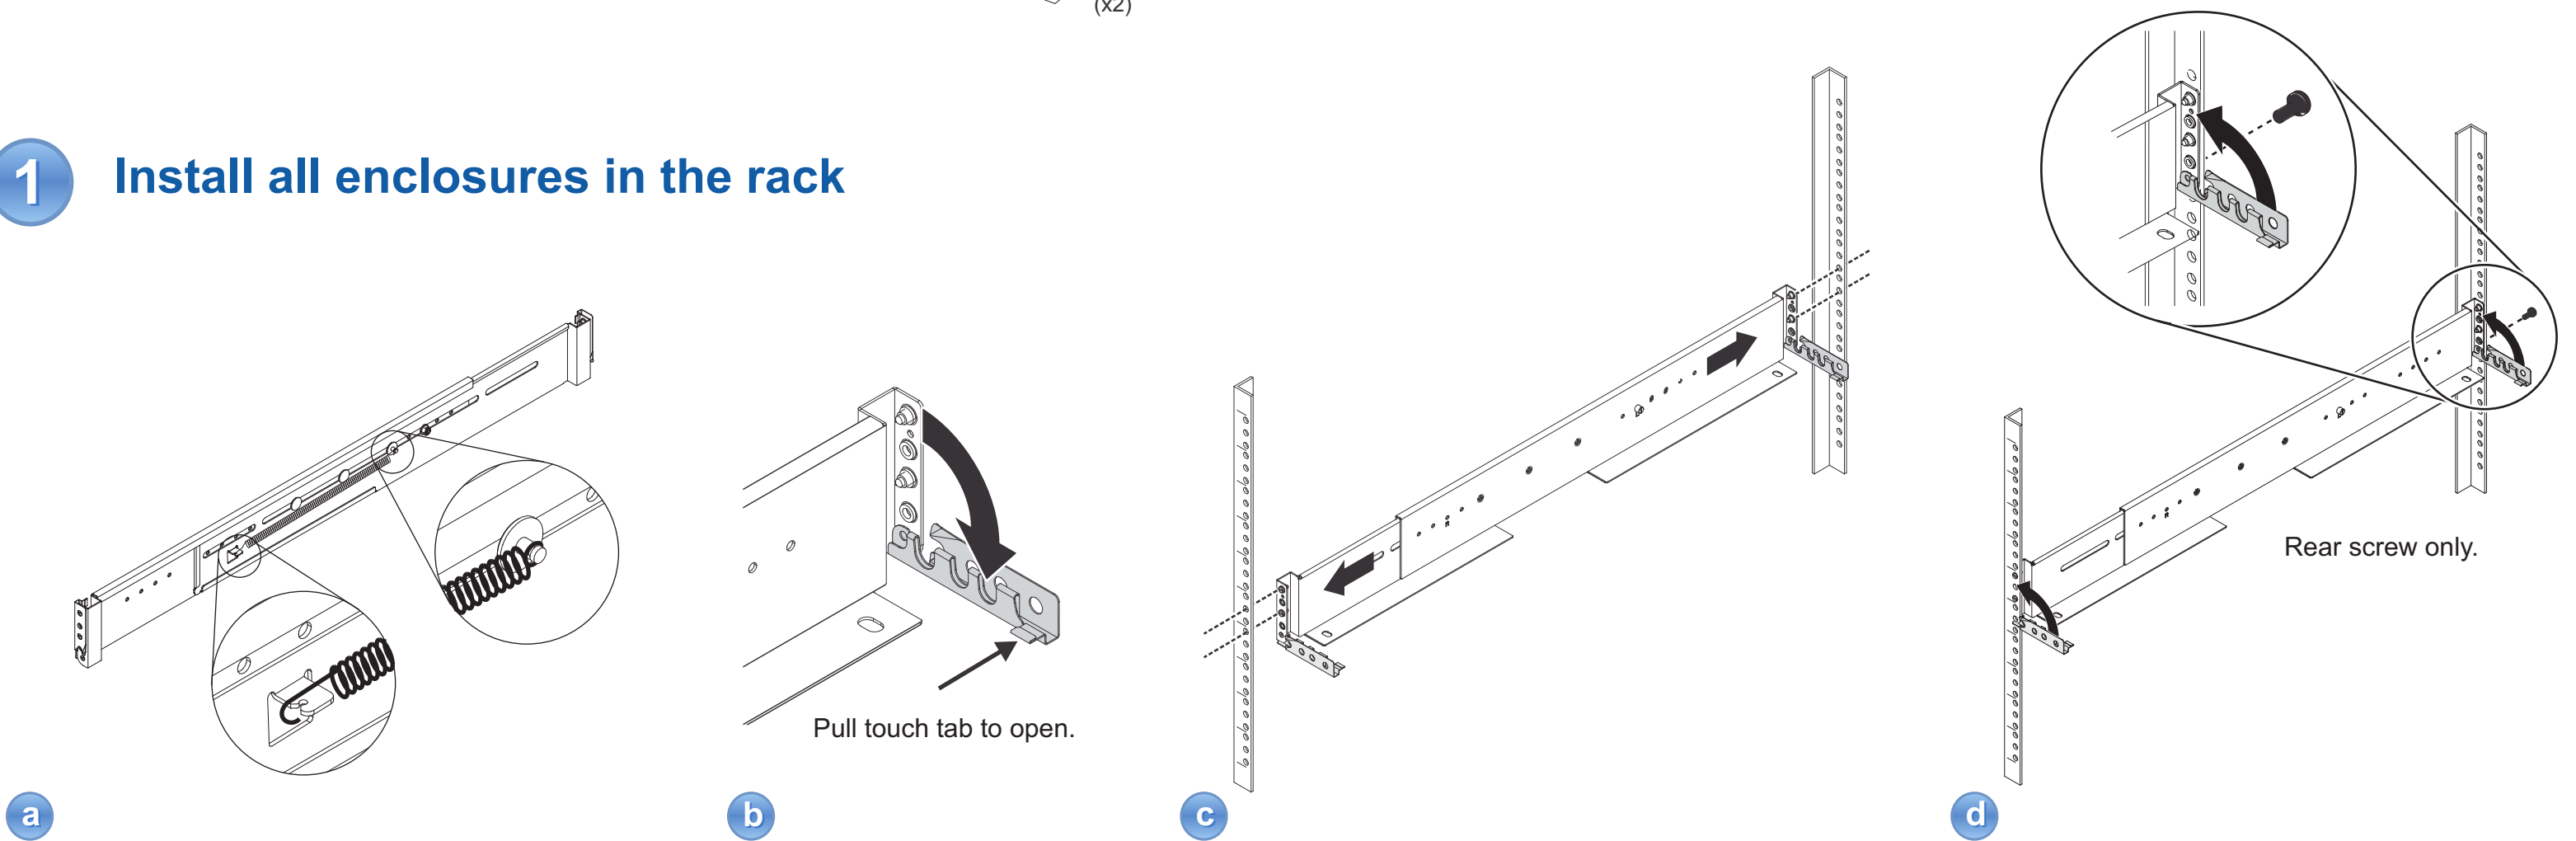

2 Install all drives **3 Install optional components**






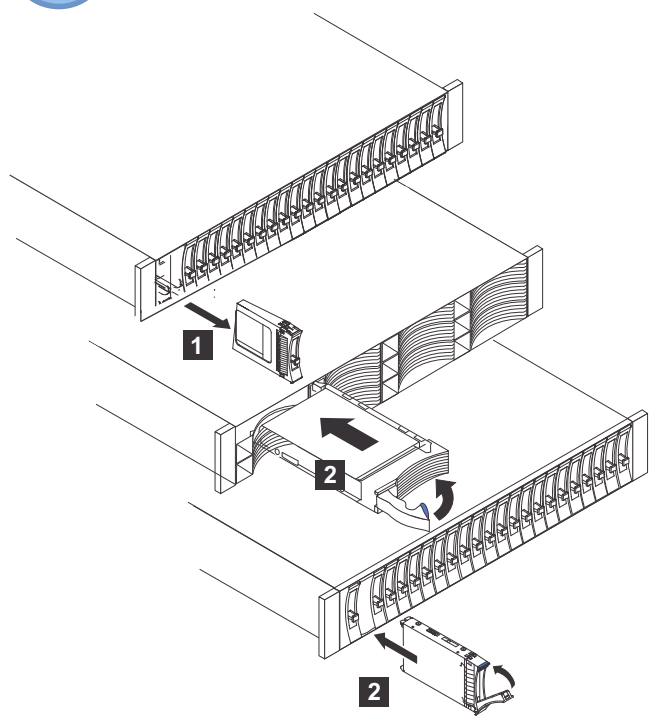


Remove the node canister and its cover.

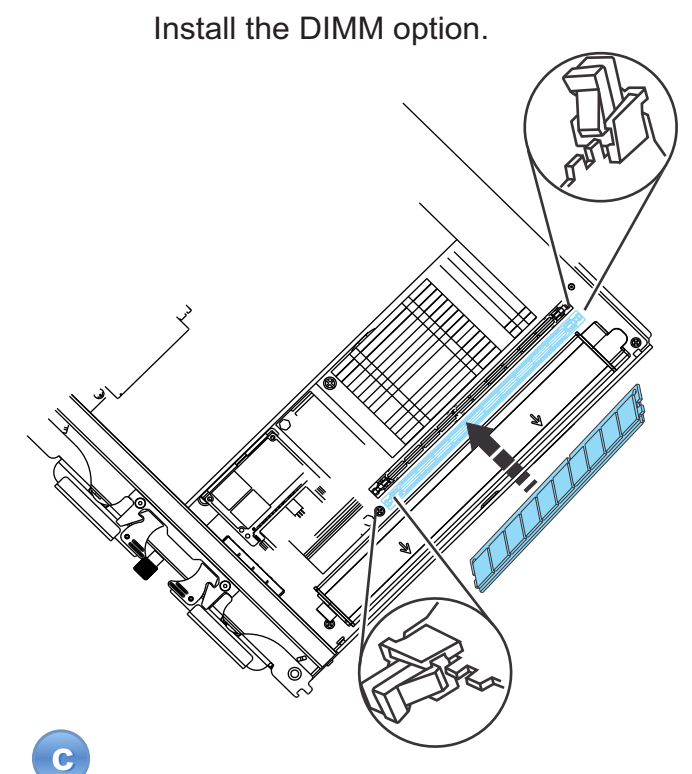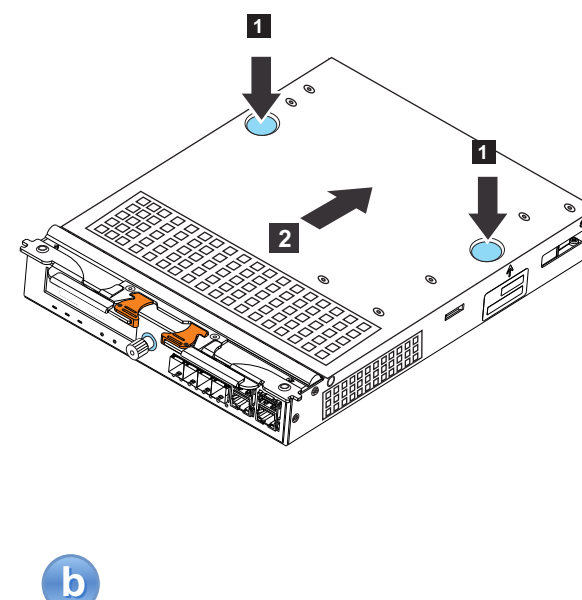
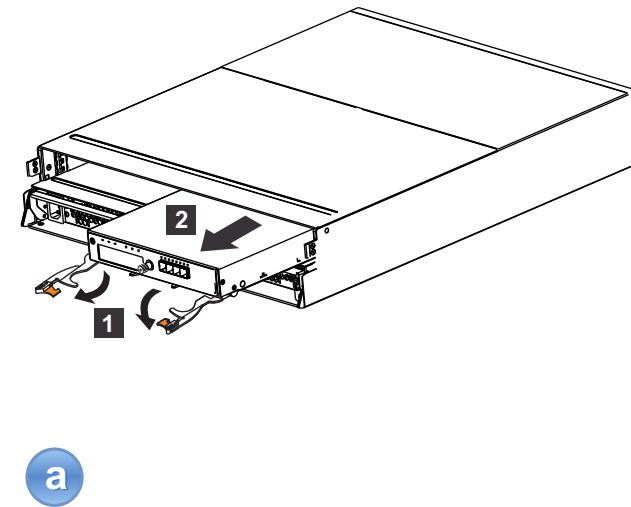


Install the DIMM option.

Install any host interface cards.

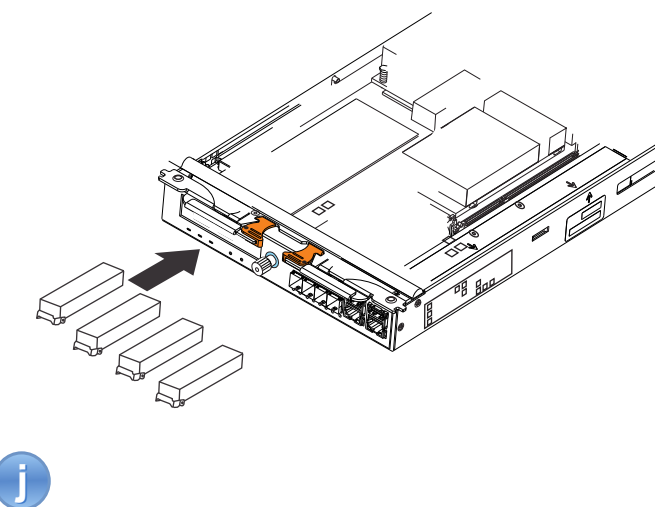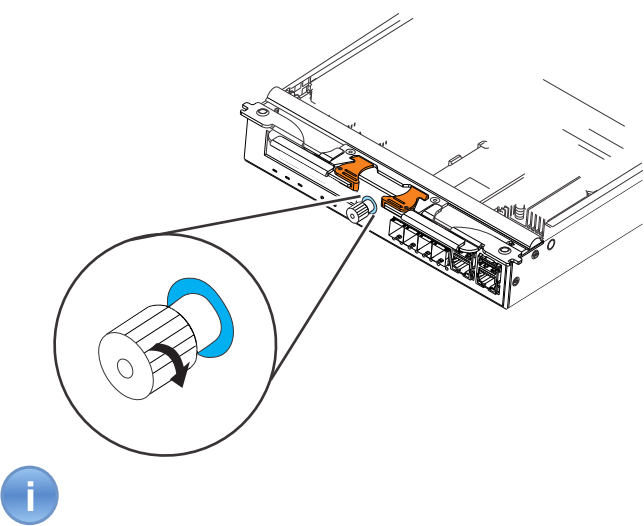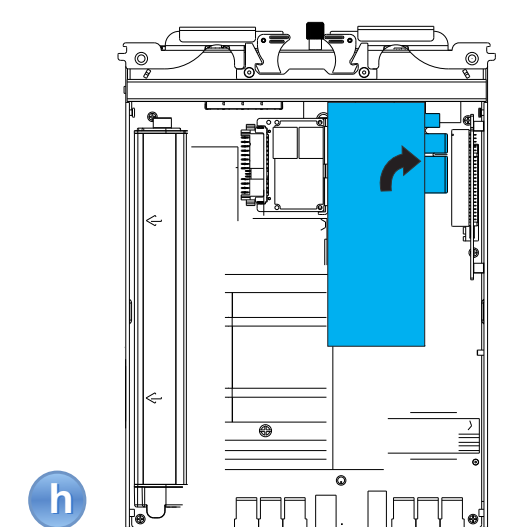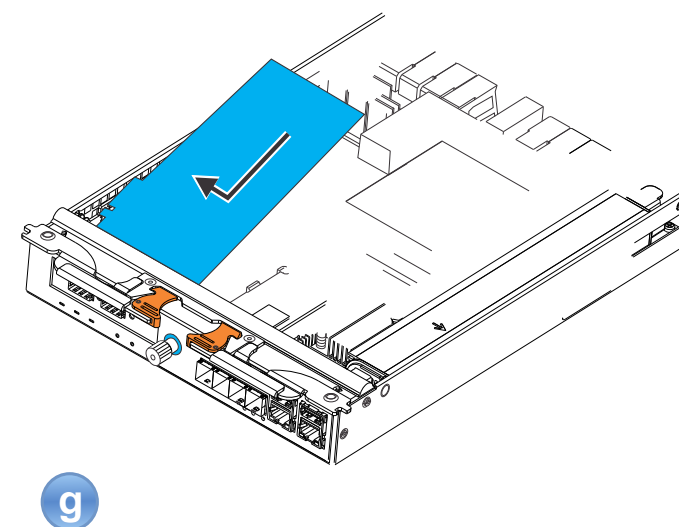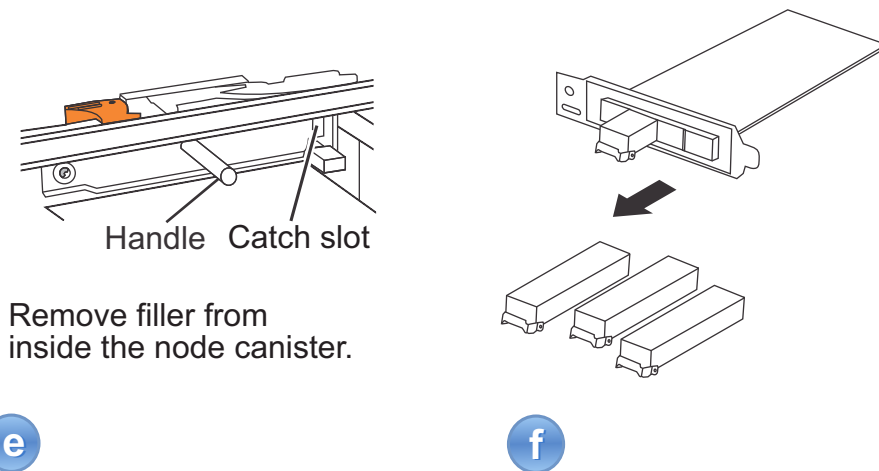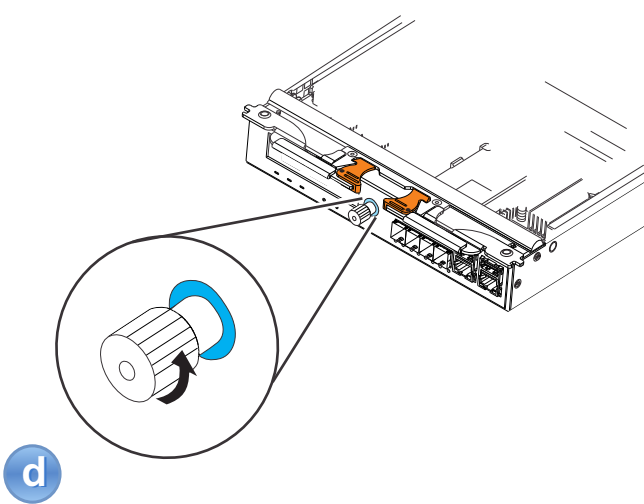

Replace the cover and the node canister.

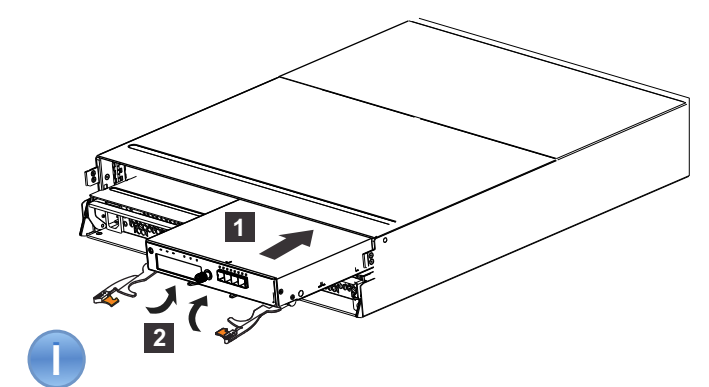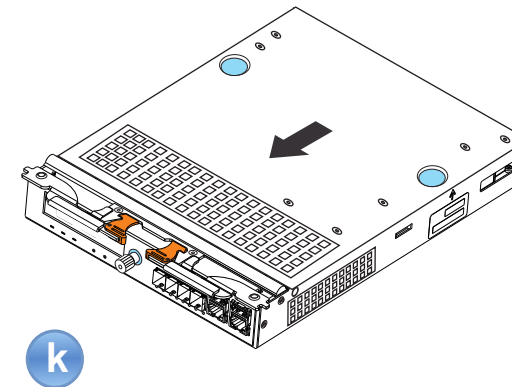


4 Connect cables and power on


1. Attach expansion enclosure attachment SAS cables to any expansion enclosures.
2. Attach Ethernet port 1 cables to the same subnet in your network.
3. Attach data cables to any optional host interface cards and to Ethernet port 2.
4. To power on, connect a power cable to each power supply. There is no switch.

After powering on, each power LED is lit solid. Status LED blinks on control enclosure, and is solid on expansion enclosures.

Green LED is lit on SAS ports when correctly attached.

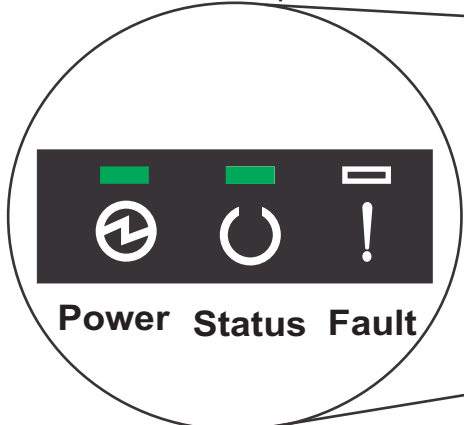

Ethernet ports
USB ports

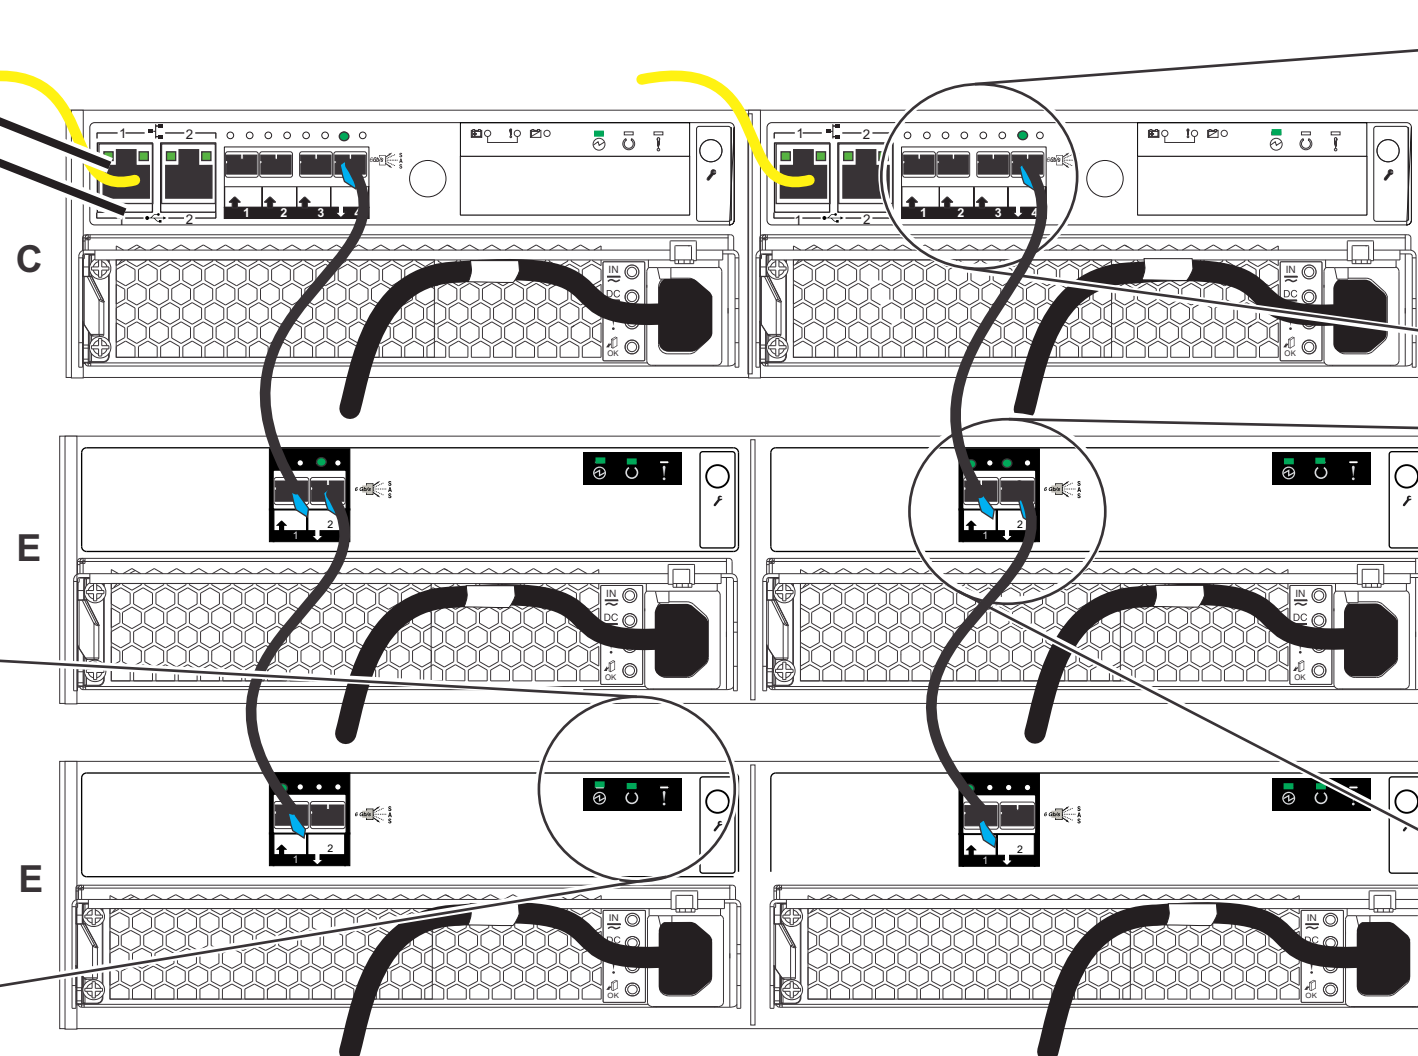

Blue pull tab beneath port.

5 Configuring an existing system


When adding expansion enclosures to an existing system:

After installing, cabling, and powering on the additional expansion enclosure, start the management GUI, go to **Monitoring > System Details**. Select your system name in the tree. Go to **Actions > Add Enclosures > Expansion only**. Then follow the on-screen instructions.

6 Initializing a new system (not for existing systems)

Required for configuration:

- IP address
- Subnet mask
- Gateway
- NTP server (for automated date and time)

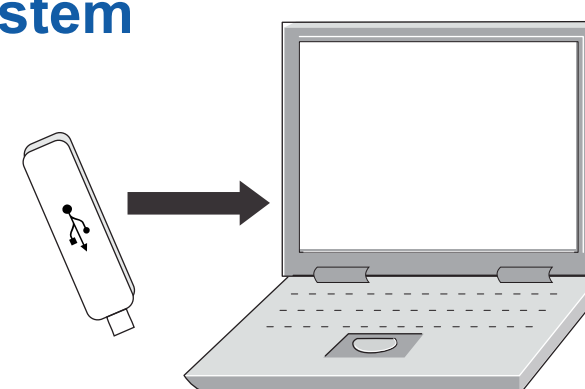

Launch the InitTool program { Linux®
Mac OS®
Windows™

System management GUI log in:
superuser / passw0rd

